

The EleCo

elevair™ elefone™ elevator™
SOLUTIONS

Safety for lift passengers and personnel

QUICK GUIDE

4G

GATEWAYS



Step 1

Location



Select an accessible location to mount the Gateway. The MDF room or the lift control panel is recommended.

Step 2

Attach antenna



Attach the supplied antenna & place in a position outside of the lift shaft.

Step 3

Insert SIMs



Insert primary and secondary SIM cards into the slots marked SIM1 & SIM2.

Step 4

Connect phoneline



Connect the lift emergency phone wires to the FXS connection point on the Gateway.

Step 5

Connect power



Connect the provided power pack to the unit.

Step 6

Turn On



Turn the unit on check signal connection & strength. This process can take between 1 - 3 minutes.

detailed support elefone.com.au/support or refer to included programming manual.

TROUBLESHOOTING



CONNECT PHONELINE



NB: network connection take 2mins on first start-up.

If no LED's are illuminated after power up please check the power supply is connected correctly.

If the EasyGate does not register to GSM network:

- Check the SIM card
- Check the PIN
- Check the antenna connection
- Choose a place with a good GSM signal.

TROUBLESHOOTING

detailed support elefone.com.au/support or refer to included programming manual.