


LIFT 1 E-PHONE PROGRAMMING GUIDE

IMPORTANT

Prior to setting up the device, please ensure that the Emergency phone is connected to an active lift phone/GSM line. In order to **save** your settings you **MUST** press **#** prior to hanging up the call.

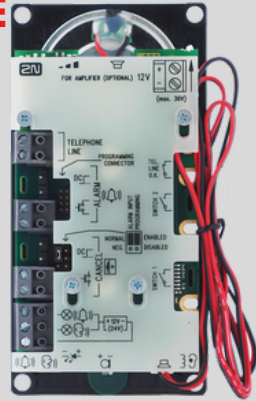

1 ENTER SET-UP MODE

Dial the lift phone number from a mobile or landline handset. When the emergency telephone answers press ***12345***

2 PROGRAM EMERGENCY CALL CENTRE NUMBER

Enter **011***

Enter "**Emergency Call Centre Number**" Enter ***** to save.

To check programmed number enter **011*** If correct press

If incorrect enter **011*Call Centre Number*** Enter ***** to save **#**

3 AUSTRALIAN SPECIFIC SETTINGS

Enter **018*1***

Enter **111*3***

4 SET MIC & SPEAKER VOLUME

For speaker volume enter **933*22***

For microphone volume enter **934*20***

5 RECORD SITE LOCATION

Enter **872*** (This is for your own voice recording of the lift site location)

Enter **12345*** Wait for high pitch tone for 7 seconds followed by a beep, speak immediately to record Lift Number, Lift Street Address, City and State.

Press ***** (Your recording will playback automatically).

To re-record the details, repeat process.

6 LOCATION ANNOUNCEMENT

Enter **875*11*** (This enables the recorded message to announce when the call is answered)

7 SETUP COMPLETE!

Press **#** to exit programming mode and end the phone call.

Well done. Set up is complete.

+ SMS PROGRAM EXAMPLE

Copy exactly and SMS every 2N emergency phone connected to a 2N gateway you need to program:


L1 CNF 12345 011=**call center number** 111=3 018=1 933=22 935=20

875=11


VIDEO WALK-THRU



ALARM/TELEPHONE BUTTON C.O.P

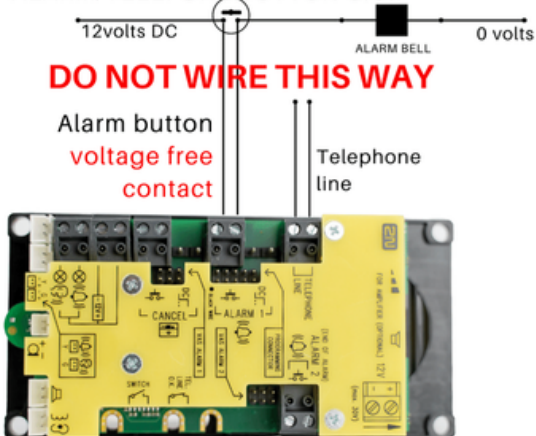

ALARM/TELEPHONE BUTTON C.O.P

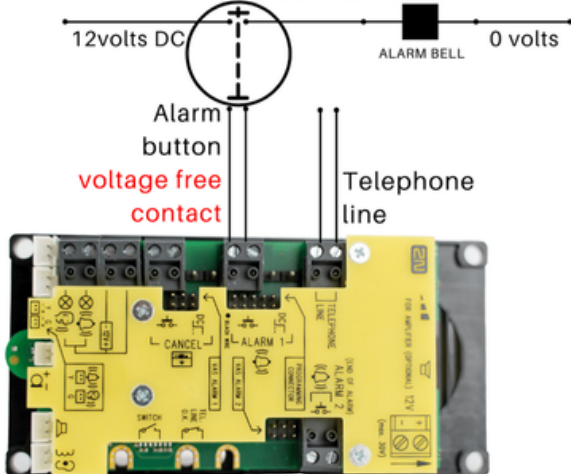

ALARM/TELEPHONE BUTTON C.O.P

