



GATEWAY SMS PROGRAMMING GUIDE

IMPORTANT

Send SMS' to SIM card/phone number for SIM slot 1

SMS messages are case sensitive

Copy syntax below including spaces

1

SET-UP

SET MOBILE PHONE NUMBER YOU WANT EASYGATE TO REPORT TO

EG CNF 12345 714=**04XXXXXXXX**

SET SITE ADDRESS OF EASYGATE

EG CNF 12345 968=(**Lift Street Address**) include the brackets

SET AUTOMATED POWER FAILURE REPORTS

Choose from 1 to 255 minutes

EG CNF 12345 963=**60**

SET A REGULAR GENERAL REPORTING INTERVAL

Choose no. of days, ie. 1=daily, 7=weekly

EG CNF 12345 967=**1**

2

REALTIME REPORTS

Receive realtime updates by sending an SMS for these status report.

GENERAL REPORT

EG INF 12345

This gives you general info on the unit, its serial number, IMEI number, signal strength of SIM 1 and power status & how many days until battery expires.

BATTERY STATUS REPORTS

EG CNF 12345 962=**1**

REBOOT GATEWAY

EG RST 12345

Send the SMS to SIM 1

This switches it on and off remotely.

Good way to reboot SIMS if you think that they may have been inserted but not activated.

RESET GATEWAY

EG DEF 12345

This will restore default settings and clear any settings you have entered.

RESET BATTERY COUNTDOWN: When new batteries are installed, the countdown days can be reset. EG CNF 12345 60=**12345**

3

MISC.

BATTERY LIFE: Reports days of battery life remaining

SIGNAL STRENGTH

Strong signal: 2-4 Blue bars on the signal strength indicator.

Weak signal: 1 Blue bar on the signal strength indicator. A 9dB booster antenna which comes with 10 meter cable may be required.

+

SMS PROGRAM EXAMPLE

Copy exactly the below into your phone and SMS to every 2N gateway to program quickly.

EG CNF 12345 714=**reporting mobile number** 968=(**site address**) 962=**1**

963=**20** 967=**1**

